

mySewnet Embroidery Software Levels: Gold/Platinum

## PhotoStitch Wizard

Create an embroidery design automatically from a picture.

- Choose from Color, sepia or monochrome versions
- Use Color Tile to create small blocks of stitches with a tiled effect
- Create a line of continuous, wavy stitches with a single color with Linear Photo Stitch

1.	Open mySewnet Embroidery. Choose Blank Canvas. In the Hoop Selection pop-up choose 120mm x 120mm Hoop. Orientation Rotated. Click OK	Hoop Selection     X Hoop Type Hoop Group: Pfaff creative icon     V Hoop Size: 120mm × 120mm - creative 120 Square Hoop     □Included in My Hoops
		Orientation       Natural       Rotated       Enter Size       Enter Hoop Size       Width:     120 mm       Height:     120 mm       OK     Cancel
2.	Go to the create Tab and PhotoStitch. You can choose to either create a Photo Stitch Design into the selected hoop or draw a rectangle in the hoop area to set a	Create     Encore     Letter     SuperDesign     Fra       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create     Image: Create       Image: Create     Image: Create     Image: Create     Image: Create     Image: Create
	size.	Sculpt Block     Sculpt Characteristics     PhotoStitch Into Hoop     PhotoStitch Into Rectangle
3.	In the next pop-up you will see the different options for Photo Stitch. When you click the different options you will get a short description of what the result will look like and an example picture.	Create Color PhotoStitch Embroidery     Create Sepia PhotoStitch Embroidery     Create Monochrome PhotoStitch Embroidery     Create Color Tile PhotoStitch Embroidery     Create Linear PhotoStitch Embroidery
		Create a PhotoStitch embroidery from a color photo, generating a randomized pattern of stitches, using multiple threads for a full color result.

4.	In this example we are using the first option with Color PhotoStitch. Click Next.	
5.	Here you choose which background picture you want to use;	PhotoStitch Wizard - Choose Picture
	Load a picture - Find the picture you want to use in your folders.	Choose Picture
	Paste Picture - If you previously Copied the picture. From Scanner or Camera - Find your source and open picture.	Load a Picture
	Create New Picture - This will open the Draw & Paint module and you can create a new picture.	Paste Picture
	Edit Picture - Will become available when a picture is chosen and you have the possibility to edit.	From Scanner or Camera
		Create New Picture
		Edit Picture
6.	In the next step, you can zoom and crop your image by clicking on the blue corners. To the left is the original image and to the right a Preview of the changes. You can also rotate, Crop and change perspective.	
7.	You can also choose to crop the picture to a fixed orientation. Click Next	100% Crop to a fixed orientation Square ✓ Square Portrait Landscape

8.	In the next step, you have the possibility to remove the background. This will make sure no stitches are created in that area.	PhotoStitch Wizard - Remove Background          Remove Background         Zoom         Q       Q         Q       Q         I:1         I:1

9.	In the next step you will get more Picture Options.	PhotoStitch Wizard - Picture Options
	Autolevel improves brightness and contrast in most photos, and can be used to bring out the color in underexposed pictures.	Zoom
	Use Red Eye Removal to reverse the red eye effect caused when flash is reflected back by the retina of the eye. Click the Select Eye button and draw an ellipse round the affected area.	Autolevel
	Increasing saturation enhances the intensity of colors, for instance to make pale skin tones appear 'warmer'.	Select Eye Draw an ellipse around the eve to remove any red eve
	edits you have made. You can do it here.	effect. Repeat for each eye.
		Saturation -10 0 10 20
		Save Picture
10.	You will also get a preview of the result of the changes you have made.	Source Picture Preview
	In this picture it is clear that the Autolevel brightens the colors.	

11.	In the next step you will set the Design Size. In this case 120x120mm is preset since we chose to create a square design in the hoop. If you set only the width, the program will calculate the height based on your picture.	PhotoStitch Wizard - Design Size Zoom Q Q EE 1:1 Enter Design Size Width 120 mm Height 120 mm
12.	The Choose Thread Colors page of the PhotoStitch Wizard only appears when you are creating a color, sepia, monochrome or color tile PhotoStitch. Number of Colors The Number of Colors is initially set to the recommended number of colors. When this number is changed, the list of thread colors and the preview are updated. The maximum Number of Colors is 256. Apply When the number of colors has been changed, click Apply to adjust the threads and the preview. Reset Use Reset to return the color list to the initial set of picture colors. The picture colors will be matched to thread colors from the thread range shown in the Change All To box. Any custom thread matches that are required must be re-selected with Change Thread. Change All To; Click the drop-down arrow to choose a different thread range. When a thread range is chosen, each picture color in the list will be assigned the nearest matching thread color from the chosen thread range.	PhotoStitch Wizard - Choose Thread Colors          Choose Thread Colors         Zoom         Q       Q       1:1         Color Selection       Image: Color Selection         P       18       Apply         Reset       Change All To       Robison-Anton Rayon 40         Robison-Anton Rayon 40 2285 V       Robison-Anton Rayon 40 2285 V         Robison-Anton Rayon 40 2285 V       Robison-Anton Rayon 40 2285 V         Robison-Anton Rayon 40 2285 V       Robison-Anton Rayon 40 2285 V         Robison-Anton Rayon 40 2285 V       Robison-Anton Rayon 40 2285 V         Robison-Anton Rayon 40 2285 V       Robison-Anton Rayon 40 2593 C         Robison-Anton Rayon 40 2298 B       Robison-Anton Rayon 40 2435 C         Robison-Anton Rayon 40 2433 L       Robison-Anton Rayon 40 2433 L         Robison-Anton Rayon 40 2480 K       Robison-Anton Rayon 40 2480 K         Robison-Anton Rayon 40 2480 K       Robison-Anton Rayon 40 2480 K         Robison-Anton Rayon 40 2480 E       Robison-Anton Rayon 40 2480 E         Robison-Anton Rayon 40 2289 F       Robison-Anton Rayon 40 2435 E         Robison-Anton Rayon 40 2289 F       Robison-Anton Rayon 40 2435 E         Robison-Anton Rayon 40 2289 F       Robison-Anton Rayon 40 2435 E         Robison-Anton Rayon 40 2285 C       Robison-Anton Rayon 40 2265 C

13.	Change Thread Click a color in the list, then click the Change Thread button. The Color Selection dialog box will appear so that a different thread color can be chosen. Alternatively, double-click a color in the list and the Color Selection dialog box will appear.	Change Thread Delete	Anton Rayon 40 2290 C Anton Rayon 40 2265 C Pick Delete All
	Pick Click Pick to add thread colors to the list by clicking the desired colors in the Source Picture.		
	When Pick is selected, the pointer changes to a pointer over the source picture. Click the picture to pick up the color under the tip of the eyedropper, and the nearest matching thread color from the selected Thread Range will be automatically selected and added to the thread color list. Because the PhotoStitch effects use a color blending process, the colors are recalculated.		
	Delete Delete the picture color currently highlighted in the list. Because the PhotoStitch effects use a color blending process, the colors are recalculated. The Thread Color Preview is displayed again, with the reduced set of thread colors.		
	Delete All Click Delete All to remove all the thread colors from the list if you wish to use Pick Color to choose colors from the Source Picture.		
	Focal Area The Focal Area allows you to focus on the area of the picture that you want used when the color palette is selected.		
	Focal Area can be used to concentrate on the flesh tones in a face, rather than the color of the hair or clothes.		

14.	Define a Focal Area	Focal Area
	Use this option to enable the selection of a Focal Area. Then click and drag to select the area. By default this option is not selected.	Define a Focal Area  Medium High
15.	Click Next and the picture is being digitized.	PhotoSitch Wizard - PhotoSitch Embroidery Options X Platistick Intervalery Options Zoom Q, Q, 332 11
	The PhotoStitch Embroidery Options page allows you to view and check the final design in 3D before closing the PhotoStitch Wizard. Optionally, choose whether or not to enhance detail in the picture.	Ref See 10%
	Enhance Detail Enhance Detail makes details in the picture more prominent. For example, it can be used to improve definition in a photo with good detail, but little contrast.	
	Enhance Detail does not change the colors used, it affects the way that those colors are used.	
	Density Select the density of the stitching. 1 is the standard default density, 9 is the most open. Design Information	
	The design information boxes show the dimensions (Width and Height), Stitch Count, and number of colors for the embroidery. The design information may change when the embroidery is exported, depending on the Optimize for Sewing Options.	
	Back If desired, use the Back button to go back through the PhotoStitch Wizard and modify settings before previewing the design again.	
	Finish Accept the final design and close the PhotoStitch Wizard.	
16.	To save the design click on File and Save	

	As. This will save a .vp4 file that is fully editable again if you want to continue working with it.	
17.	If you want a different format you use the Export instead.	Welcome         New Window         Open         Insert         Save         Save As         Export
18.	Here you will get a list of all available formats and you can choose the format you need for your embroidery machine.	Husqvarna Viking / Pfaff (.vp4)         Husqvarna Viking / Pfaff (.vp3)         Husqvarna Viking / Pfaff (.vip)         Husqvarna Viking / Pfaff (.vip)         Husqvarna (.hus)         Janome / Singer (.jef)         Husqvarna (.sew)         Helco Expanded (.exp)         Ffaff (.pcs)         Tajima (.dst)         Toyota (.100)
19.	On the Export pop-up you also get additional choices under Optimize for Sewing. These are settings you can change in Configure.	Optimize for Sewing         Combine         Remove Overlap         ✓ ColorSort         ✓ Optimize Stitch Length:
20.	If you open Configure under the File menu and the Export Tab you can select your options. Removing the checkmarks for Combine and Color Sort helps if you want to decide when to do that manually before Export. This is very useful when working with Appliqué designs where you want to keep the number of color blocks for the technique steps. When you have made the changes click Apply and OK.	ImpSewnet™ Configure       X         ImpSewnet       Utilities       Appearance       Import       Export         Optimize for Sewing       Combine       Import       Import       Import       Import         ColorSort       Import       ColorSort       Import       Optimize       Stitch Length:       Options

21.	Under File and Print, you will get the option to print a template. This is perfect if you want to experiment with the placement or see how the design aligns.	Print       Print       Copies:       1   Overview       Print Overview
	Make sure the Design Scale is set to 100%	Scale Hoop Zoom to Fit ✓ ✓ Print Hoop Grid
You can choose what information you want on your template by checking/unchecking the boxes under Print Information.	Scale Hoop Zoom to Fit  Print Hoop Grid  Worksheets  Print Individual Worksheets  Design Scale 100%  Grid  Flip design for felting or reverse embroidery  Print Information  Dimensions  Hoop  Color Information  Embellishment Information  Notes  Settings Export Options Technical Information Units of Measurement  Millimeters (mm)	
		Millimeters (mm) Inches (") Print Setup

To create the framed picture, embroider your picture on a basic white fabric. These types of designs are usually very dense and requires more stabilizer to get a nice result.

